

XBOX ADAPTIVE CONTROLLER INPUT DEVICE SPECIFICATION

INPUT CONNECTOR SPECIFICATIONS FOR ACCESSIBILITY BUTTONS,
TRIGGERS, AND THUMBSTICKS FOR USE WITH THE XBOX ONE ADAPTIVE
CONTROLLER (v1.6)

1 PROPRIETARY NOTICE

This document is proprietary information of Microsoft Corporation and is provided “as is” without any warranty expressed or implied.

Microsoft and its suppliers may have patents, patent applications, trademarks, copyrights, trade secrets and/or other intellectual property rights covering subject matter in this document. Microsoft’s furnishing of this document to recipient does not grant or imply any license to any patents, trademarks, copyrights, trade secrets or other intellectual property rights, and recipient’s permitted use of any such intellectual property rights, if any, is solely governed by the Agreements.

© 2012-2024 Microsoft Corporation. All rights reserved.

Microsoft, Xbox, and Xbox One are trademarks of the Microsoft group of companies. All other trademarks, if any, are property of their respective owners.

2 REVISION HISTORY

Revision	Engr Version	ECO#	Date	Description
	0.1	N/A	9/7/17	Initial creation of the input specification document
	0.1.1		9/25/17	Updated with a lexicon section and added updates from Gaylon
	1.0		10/29/17	Updated analog jack requirements.
	1.1		06 Nov 2017	Added ADC joystick graphs
A	1.2		12 Dec 2017	Added CI Information on ferrites
B	1.3		13 Dec 2017	Updated Graphs
C	1.4		17 Dec 2017	Updates for firmware support
D	1.5		30 Mar 2018	Updated electrical specs and USB-A compatible devices
E	1.6		23 May 2024	Updated for XAC 5.21 firmware

Table 1 Revision History

3 CONTENTS

1	PROPRIETARY NOTICE.....	2
2	REVISION HISTORY	3
3	CONTENTS.....	4
4	FIGURES.....	4
5	TABLES.....	5
6	LEXICON	6
7	PURPOSE	6
8	OVERVIEW.....	7
9	INPUT JACKS.....	7
9.1	DIGITAL INPUT JACKS.....	8
9.1.1	INPUT CONNECTOR.....	8
9.1.2	BUTTON DEVICES.....	9
9.2	ANALOG INPUT JACKS.....	10
9.2.1	INPUT CONNECTOR.....	10
9.2.2	BUTTON DEVICES.....	11
9.2.3	TRIGGER DEVICES.....	12
9.2.4	JOYSTICK DEVICES.....	13
9.2.5	CALIBRATION.....	14
10	USB JACKS.....	14
10.1	POWER LIMITS	16
10.2	COMPATIBLE DEVICES	16

4 FIGURES

Figure 1	3.5MM HEADPHONE JACKS STYLES	7
Figure 2	DIGITAL INPUT CONNECTOR	8
Figure 3	DIGITAL INPUT PASSIVE SWITCH	9

Figure 4 ANALOG INPUT CONNECTOR	10
Figure 5 DIGITAL INPUT PASSIVE SWITCH	11
Figure 6 TRIGGER STYLE PASSIVE DEVICE	12
Figure 7 PASSIVE JOYSTICK DEVICE	13

5 TABLES

Table 1 Revision History	3
Table 2 Definitions.....	6
Table 3 DIGITAL INPUT PINOUT	8
Table 4 DIGITAL INPUT PASSIVE ELECTRICAL SPECS	9
Table 5 ANALOG INPUT PINOUT	10
Table 6 DIGITAL INPUT PASSIVE ELECTRICAL SPECS	11
Table 7 TRIGGER ELECTRICAL REQUIREMENTS	13
Table 8 THUMBSTICK ELECTRICAL REQUIREMENTS	14
Table 9 USB Joystick Power Delivery	16

6 LEXICON

Word	Meaning
USB	Universal Serial Bus – a standards-based interface for most computer equipment connectivity. Both power and signaling are provided through the USB connector. Device behavior is specified via profiles defined per the standard.
Controller	A device that provides various inputs to a user to control activity on a computer, console, or mobile device. A controller can have both digital (open or closed) buttons as well as analog inputs such as thumbsticks or triggers.
Xbox Adaptive Controller	A controller designed to enable custom gaming experiences for gamers with disabilities. The device exposes an electrical interface that allows users to easily connect their necessary sensors and controls to the controller.

Table 2 Definitions

7 PURPOSE

The purpose of this document is to describe the input devices that are compatible with the Xbox Adaptive Controller. The description will include the types of input devices allowed, mechanical connector requirements, electrical requirements, and application information for the creation of such devices.

The intended audience for this document is the development, test, and manufacturing engineers responsible for creating peripherals for the Xbox Adaptive Controller. This specification describes the following:

- Electrical specification of the various input plugs on the Xbox Adaptive Controller
- Mechanical descriptions of the various input plugs on the Xbox Adaptive Controller
- Application notes for creation of devices, including device expected wiring

8 OVERVIEW

This document reviews the input structures of the Xbox Adaptive Controller, including the electrical and mechanical requirements. It also specifies the requirements for input accessories that can be used with the various input jacks on this device. Lastly, it describes requirements for compatible USB HID joysticks.

9 INPUT JACKS

The Xbox Adaptive Controller accepts control input through several 3.5mm audio jacks. In the marketplace, there are many types of 3.5mm jacks. This section is intended to help clarify for the user the types of headphones jacks available and what is recommended for operation with the Xbox Adaptive Controller.

The following terminology is used with connectors of this style:

- The tip of the connector is labelled T; this stands for Tip.
- The next ring (if it exists) is labelled R1; this stands for Ring.
- The next ring (if it exists) is labelled R2; this also stands for Ring.
- The last ring is labelled S; this stands for Sleeve.

The following styles of 3.5mm headphone plugs are supported by the Xbox Adaptive Controller:

Name	Configuration	Function
Mono Headphone Jack		T: Audio signal S: Ground return
Stereo Headphone Jack		T: Left audio channel R1: Right audio channel S: Ground return
Stereo Headphone Jack with Microphone (CTIA standard)		T: Left audio channel R1: Right audio channel R2: Ground return S: Microphone

Figure 1 3.5MM HEADPHONE JACKS STYLES

9.1 DIGITAL INPUT JACKS

The digital input jacks are meant to allow buttons to be plugged in that perform the function of the digital buttons used on the typical Xbox One controller. These include the A/B/X/Y, D-pad, Bumpers, Thumbstick switches, View, Menu, and Xbox buttons.

The Xbox button jack is uniquely designed to support powering the controller on and off, in the same manner as the on-board Xbox button (a.k.a. Nexus button).

9.1.1 INPUT CONNECTOR

The input connector pinout is shown below:

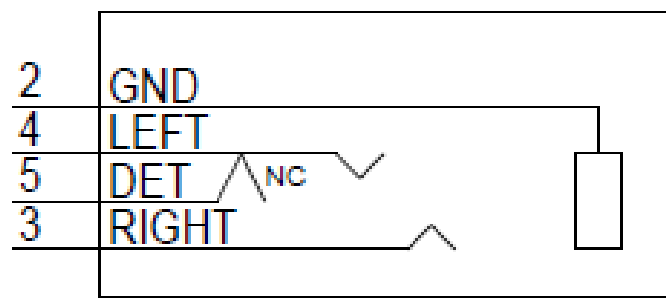


Figure 2 DIGITAL INPUT CONNECTOR

These signals are connected internally as follows:

Signal	Direction	Function	Electrical Connection
LEFT (T)	Input	Button State	3.3 V pull-up via 10K resistor
RIGHT (R1)	N/A	Ground	0 V
GND (R2)			
MIC (S)			
DET	N/A	Internal to PCBA	N/A

Table 3 DIGITAL INPUT PINOUT

9.1.2 BUTTON DEVICES

The digital jacks are intended to be used with passive, normally open, momentary switches.

Here is an example of the wiring of switches that are to be used with these inputs.

Note: The use of an EMI Ferrite bead on the cable near the device is recommended to minimize conducted noise into the circuit.

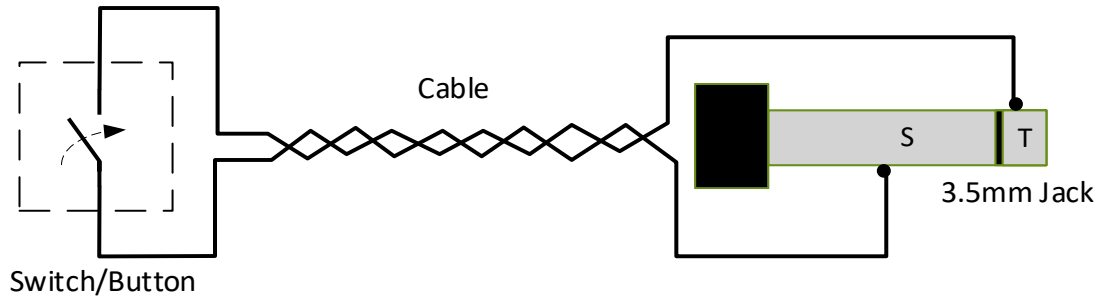


Figure 3 DIGITAL INPUT PASSIVE SWITCH

Electrical Requirements	Range	Notes
Switch Resistance (closed)	< 10 Ohms	
Switch Resistance (open)	>15 kOhms	
Max Input Voltage	≤ 3.3 V	
Input HIGH Signal Level	> 2.0 V	Button is unpressed
Input LOW Signal Level	< 0.8 V	Button is pressed

Table 4 DIGITAL INPUT PASSIVE ELECTRICAL SPECS

9.2 ANALOG INPUT JACKS

The analog input jacks are meant to allow analog devices to be plugged in that perform the functions of the thumbsticks and triggers. These jacks are also compatible with digital button devices.

There are two types of analog input jacks:

- **Triggers:** Two jacks (labelled LT and RT) are intended for devices with only a single channel of analog data, such as triggers, throttles, or bite-switches. (Digital button devices will function just like single channel analog devices when connected to LT or RT on the Xbox Adaptive Controller.)
- **Thumbsticks:** Two jacks (labelled X1 and X2) are intended for potentiometer-based devices with two channels of analog data, such as the X and Y axes of a thumbstick or joystick. (Digital button devices will be interpreted as alternate digital buttons when connected to X1 or X2 on the Xbox Adaptive Controller.)

9.2.1 INPUT CONNECTOR

The input connector pinout is shown below:

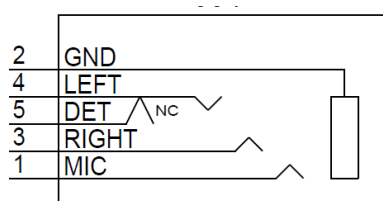


Figure 4 ANALOG INPUT CONNECTOR

These signals are connected internally as follows:

Signal	Direction	Function	Electrical Connection
LEFT (T)	Input	Button state -or- Trigger position -or- Thumbstick X axis position	0 V pull-down via a 100K resistor
RIGHT (R1)	Input	Thumbstick Y axis position	NC on trigger jacks
GND (R2)	N/A	Ground	0 V pull-down via a 1K resistor
MIC (S)	N/A	Reference Voltage	1.8 V pull-up via a 1K resistor
DET	N/A	Internal to PCBA	N/A

Table 5 ANALOG INPUT PINOUT

Note that TRS plugs will function as digital inputs when connected to thumbstick jacks.

9.2.2 BUTTON DEVICES

The analog jacks may be used with passive, normally open, momentary switches. The trigger jacks will interpret digital switch input as normal trigger input. The thumbstick jacks will interpret digital inputs as alternate digital buttons.

Here is an example of the wiring of switches that are to be used with these inputs.

Note: The use of an EMI Ferrite bead on the cable near the device is recommended to minimize conducted noise into the circuit.

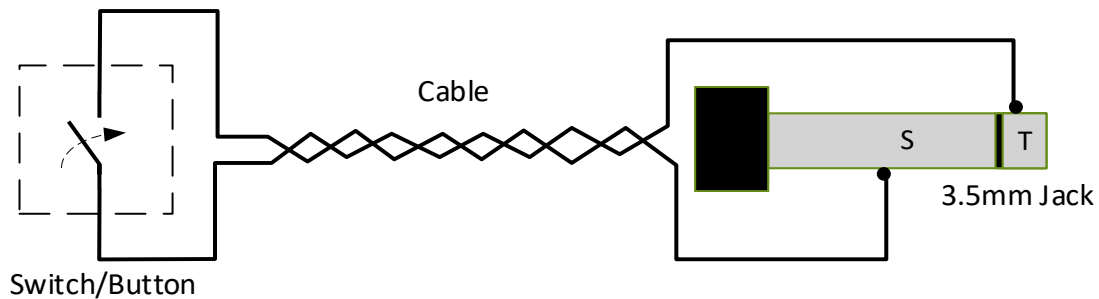


Figure 5 DIGITAL INPUT PASSIVE SWITCH

Electrical Requirements	Range	Notes
Switch Resistance (closed)	< 10 Ohms	
Switch Resistance (open)	> 15 kOhms	
Max Input Voltage	≤ 1.8 V	
Input HIGH Signal Level	> 0.6 V	Button is pressed
Input LOW Signal Level	< 0.3 V	Button is unpressed

Table 6 DIGITAL INPUT PASSIVE ELECTRICAL SPECS

9.2.3 TRIGGER DEVICES

Trigger devices are intended to be used with a single potentiometer to represent position along one axis.

Here is an example of the wiring of triggers that are to be used with these inputs.

Note: The use of an EMI Ferrite bead on the cable near the device is recommended to minimize conducted noise into the circuit.

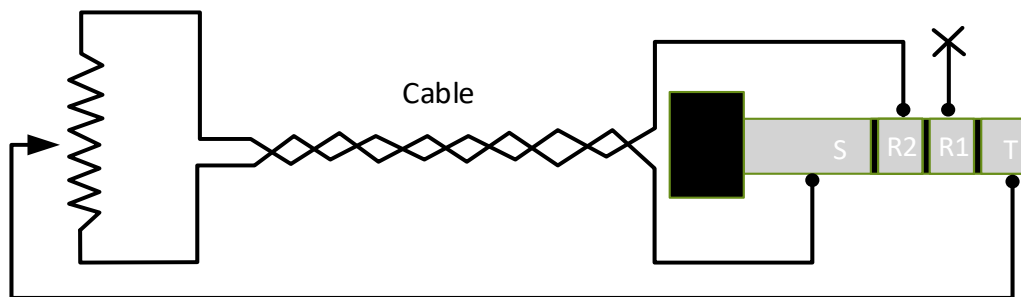


Figure 6 TRIGGER STYLE PASSIVE DEVICE

Alternatively, the trigger inputs could be driven by active circuitry. Input requirements for active drivers are the same as for passive potentiometer-based devices.

Electrical Requirements	Range	Notes
Potentiometer Resistance	10±3 kOhms	As measured from top to bottom
Max Input Voltage	≤ 1.8 V	
Input Resistance to Ground	1 kOhm	Min Voltage 0.15V w/ 10 kOhm Pot
Input Resistance to VDD	1 kOhm	Min Voltage 1.65V w/ 10 kOhm Pot
Max Iout w/ 0 Ohms to GND	≤ 1.8 mA	
Max Iin w/ Vin@1.8V	≤ 1.8 mA	
Vin Clamp Voltage (pos/neg)	-0.6 V ≤ Vin ≤ 2.4 V	
Minimum Voltage Threshold (Fully Unactuated)	≤ 650 mV	Trigger dynamic range will adapt to any minimum threshold in this range

Maximum Voltage Threshold (Fully Actuated)	≥ 650 mV	Trigger dynamic range will adapt to any maximum threshold in this range
---	------------------	--

Table 7 TRIGGER ELECTRICAL REQUIREMENTS

9.2.4 JOYSTICK DEVICES

The thumbstick jacks are intended to be used with two three-terminal potentiometers. Each potentiometer represents one axis of movement in the thumbstick.

Here is an example of the wiring of triggers that are to be used with these inputs.

Note: The use of an EMI Ferrite bead on the cable near the device is recommended to minimize conducted noise into the circuit.

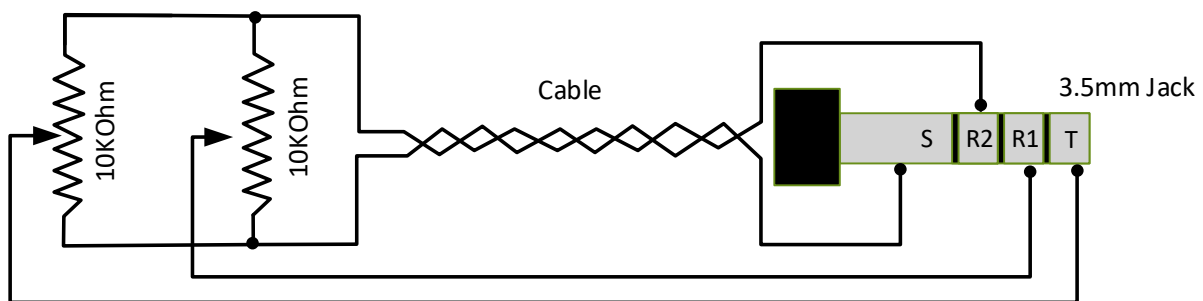


Figure 7 PASSIVE JOYSTICK DEVICE

Alternatively, thumbstick inputs could be driven by active circuitry. Input requirements for active drivers are the same as for passive potentiometer-based devices.

Electrical Requirements	Range	Notes
Potentiometer Resistance	10 ± 3 kOhms	As measured from top to bottom
Max Input Voltage	≤ 1.8 V	
Input Resistance to Ground	1 kOhm	Min Voltage 0.15V w/ 10 kOhm Pot
Input Resistance to VDD	1 kOhm	Min Voltage 1.65V w/ 10 kOhm Pot
Max Iout w/ 0 Ohms to GND	≤ 1.8 mA	
Max Iin w/ Vin@1.8V	≤ 1.8 mA	

Vin Clamp Voltage (pos/neg)	$-0.6\text{ V} \leq V_{in} \leq 2.4\text{ V}$	
Minimum Voltage Threshold (Axis Minimum)	< 750 mV	Thumbstick dynamic range will adapt to any minimum threshold in this range
Maximum Voltage Threshold (Axis Maximum)	> 950 mV	Thumbstick dynamic range will adapt to any maximum threshold in this range
Center Voltage Offset	- 130/0/130 mV	Maximum allowed voltage deviation from midpoint of min and max thresholds for return-to-center

Table 8 THUMBSTICK ELECTRICAL REQUIREMENTS

An example of a compatible device is the Alps ThumbPointer™ (Stick Controller) RKJXK/RKJXV Series.

Note: Only the dual potentiometer function is supported through the analog jack. Switch function is supported only through the separate dedicated digital jacks.



9.2.5 CALIBRATION

The Xbox Adaptive Controller will automatically calibrate voltage thresholds for minimum, maximum, and center locations for analog controls, subject to the ranges listed in each section above. The device will apply deadzones of 5% of full stroke at each minimum and maximum threshold, to ensure that the control can reliably reach the extreme in either direction. Center deadzone for thumbstick varies by application or game title.

10 USB JACKS

The Xbox Adaptive Controller has two USB Type-A ports, each assigned to either the left or right thumbstick. Each port is compliant with the USB 2.0 Full Speed signaling and electrical interface.

The USB interface is limited in compatibility and is designed to only operate with USB HID joysticks that report either a HID Joystick or HID Gamepad Usage Page. Unsupported or incompatible devices will remain

powered but will be ignored by the controller. Input from the USB HID joystick will be normalized and reported as the thumbstick position that corresponds to the respective USB port in use.

USB HID joysticks may optionally expose digital buttons through the HID interface.

The Xbox Adaptive Controller 5.21 firmware update now supports up to 12 digital buttons exposed by HID devices. Default mappings are based on the matrix below. Any additional buttons will be ignored.

An Xbox Adaptive Controller with firmware prior to 5.21 will map only the first 8 buttons according to the matrix below:

Default Assignments for HID digital buttons 1-12 & HAT Switches

Input	Left	Right
Joy 1	X1	View
Joy 2	X2	Menu
Joy 3	ThumbBtnL	ThumbBtnR
Joy 4	BumperL	BumperR
Joy 5	A	X
Joy 6	B	Y
Joy 7	View	X1
Joy 8	Menu	X2
Joy 9	ThumbBtnR	ThumbBtnL
Joy 10	BumperR	BumperL
Joy 11	X	A
Joy 12	Y	B
HAT	D-PAD	D-PAD

Note: If any of the default assignments are reassigned using the Xbox Accessories App, the new configurations will also be applied to USB HID joystick buttons. This will affect all locations in which the default listed is remapped, including the buttons on both USB devices, if applicable.

For example, creating an Xbox Adaptive Controller profile that reassigns “A” to “X” in the Xbox Accessories App will reassign “A” to “X” in the following locations:

- The Adaptive Controller’s large “A” face button
- The “A” 3.5mm port on the controller
- The Joy5 button on USB devices plugged into the left USB port
- The Joy 11 button on USB devices plugged into the right USB port

In addition to mapping up to 12 buttons, firmware versions 5.21 or later add the following new functionality:

- For devices with a HAT switch, the HAT will be mapped to DPAD up, down, left, right by default
- A second joystick will now be detected by USB HID devices that expose 2 sticks.
 - If only one USB HID device that exposes a second stick is connected, that second stick will automatically surface as the second or alternative thumbstick. A second joystick is identified by the presence of the RX,RX analog axes, or by Z,RZ if RX,RX are not present.

- If a second USB HID device or an analog joystick (connected via X1 or X2 3.5mm port) is attached to the opposite stick port, those devices will represent the other joystick and the second stick on the original USB HID device will be ignored.
- If both a USB joystick and an analog joystick (connected via X1 or X2 3.5mm ports) are attached for the same thumbstick input (Ex: A USB HID device in L port with an analog joystick in X1, or a USB HID device in R USB port and an analog joystick in X2) the USB joystick input will be accepted by the controller, and the analog joystick input will be ignored. If both L and R USB ports are occupied by USB HID devices that both expose 2 sticks, only the default stick will be detected per device per USB port and the second stick ignored.

10.1 POWER LIMITS

The Adaptive controller will provide power through the USB jacks as follows:

DC Jack State	Range	Notes
Unplugged	≤ 100 mA	
Plugged	≤ 500 mA	

Table 9 USB Joystick Power Delivery

Exceeding these limits may result in a fault condition, which will result in the respective USB-A port being disabled until the fault condition is cleared.

10.2 COMPATIBLE DEVICES

Full compatibility is only guaranteed for devices approved by Microsoft/Xbox. If you're looking to design and produce accessories for Xbox, get started at [Designed for Xbox](#).